



Programming Instructions for the above receivers:

• **Automatic Programming Mode**

- 1) **Press and hold both the Mute and the Channel Up buttons simultaneously for 3 seconds.** When the display reads "AP" let go of the two buttons. The display will now read one of five numbers "-1", "-2", "-3", "-4", or "-5".
 - -1 is the mode for our newest system, xTV.
 - -2 is the mode for our older system, LCS.
 - -3 is the mode for Broadcast Vision Transmitters.
 - -4 and -5 are for use overseas.
- 2) Use the channel buttons to select the mode for your system (You may need to hold the channel button down for a few seconds before the number changes)
- 3) Press the Mute button to begin auto programming.

When programming is complete, press the channel up or down buttons to confirm all transmitters have been programmed.

• **Manual Programming Mode (Must be done after an automatic programming)**

- 1) **Press and hold both the Mute and the Channel Down buttons simultaneously for 3 seconds.** When the "P-" appears, release both buttons. Channel number 1 will be displayed.
- 2) **A flashing channel number indicates that the channel is inactive and a steady channel number will indicate that the channel is active.** Use the Mute button to toggle the displayed channel number from either active or inactive as desired. Go through all channels and do the same as above, **pressing both Channel buttons simultaneously to lock in the changes** and return to normal operation.