

General Diagnostic Menu Access Codes

Stairmaster

level up, 8, enter (in sequence)

0,2,OK all together

Vol+,CH+,3 press and hold all three buttons

2,1,8, ok

(Touch screen) top left, top right, top center