

Woodway Treadmill Calibration

Calibrating Belt

When the treadmill is set to 0 MPH, the belt may move slightly due to electrical variance.

It is possible to adjust this movement through the treadmill display board. The procedure for calibrating belt movement differs slightly between models.

To adjust the belt movement of your treadmill through the color LCD display, perform the following steps:

1. Turn the treadmill OFF and back ON again by the main power switch.
2. Press the ON button on the display board.
3. Press 9-2-2-ENTER (in that order).
4. Press either UP/DOWN incline key to stop the belt movement. Do not press the keys too fast, as the treadmill may not respond.
5. Once the belt is stopped, press the OFF button twice to save the changes and exit calibration mode.

To adjust the belt movement of your treadmill through the LED display, perform the following steps:

1. Turn the treadmill OFF and back ON again by the main power switch.

2. Hold down the INCLINE UP button and press the ON button on the display board.

Release both buttons.

3. Press the INCLINE UP button until the display reads “bCrP”.

4. Use either FAST/SLOW key to stop the belt movement.

5. Once the belt is stopped, press the PAUSE button to save the changes. Turn the treadmill OFF at the main power switch to exit calibration mode.

If these directions do not match for your display, you may have an older version. If so, call our service department for assistance.