

DEMO mode	Demo mode is a program that cycles the console through various GUI screens to demonstrate the various available workout programs. Demo mode locks-out the controls and cannot be used until Demo mode is exited.	5555
Note: Select Settings > My Settings + Edit > Access Code number > Next.		

Accessing Service Software

1. Go to the console default **Home** page.




R40 Console Home page

2. Select the **Settings** softkey.
3. Simultaneously select the default **My Settings** and **Edit** softkeys respectively.


Note: The **My Settings** softkey can be blank and/or OFF, however it remains an active softkey. Simultaneously select the TOP and Bottom right side softkeys to access the System Settings page.

e 6

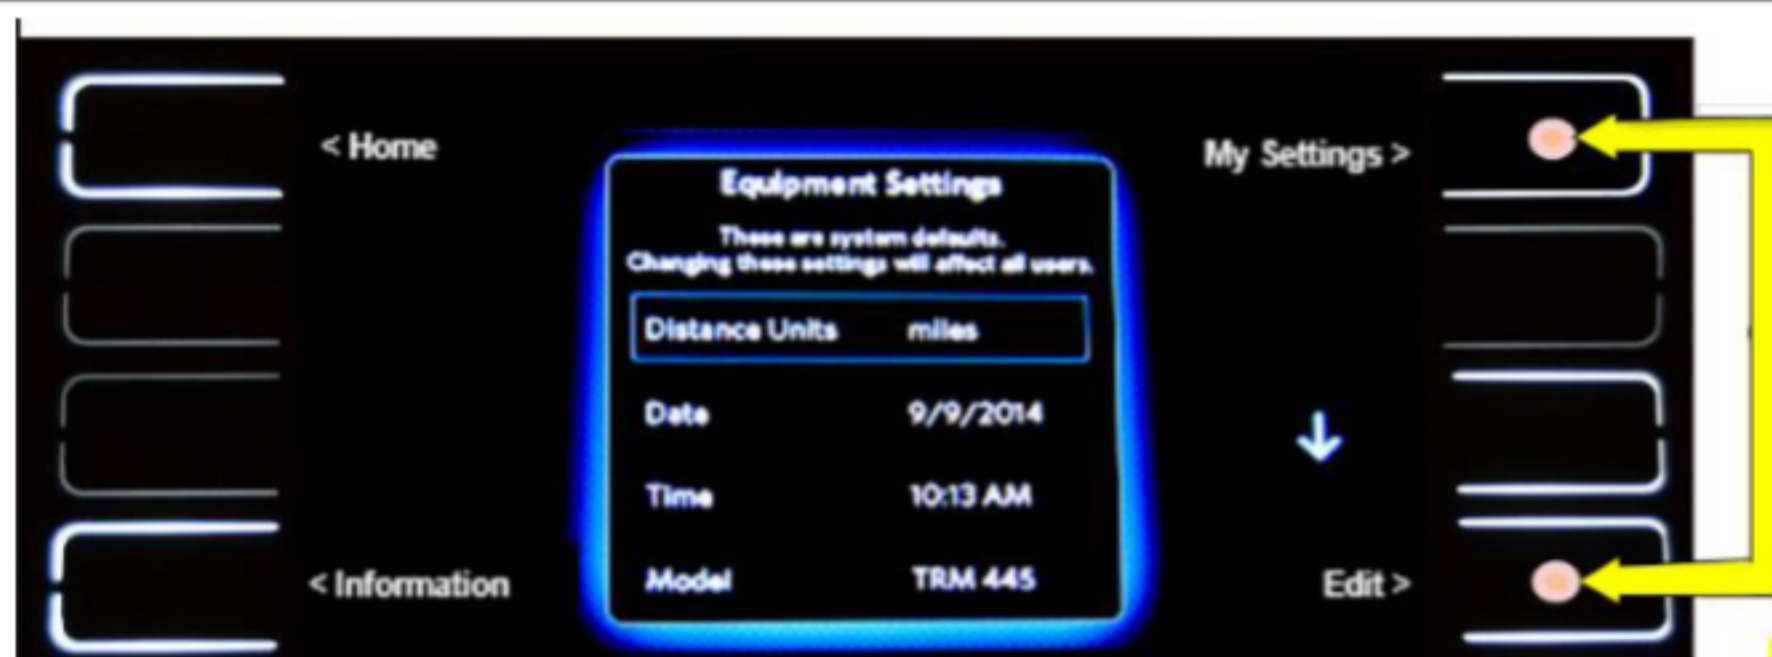

Accessing Hardware Validation mode: Simultaneously select the Right Side Upper and Lower menu softkeys.

4. Use the numbered softkeys to type in the Service Software Access Code:
 - **51765761** – Hardware Validation - Systems Tests
 - **65** – Information and Error Log

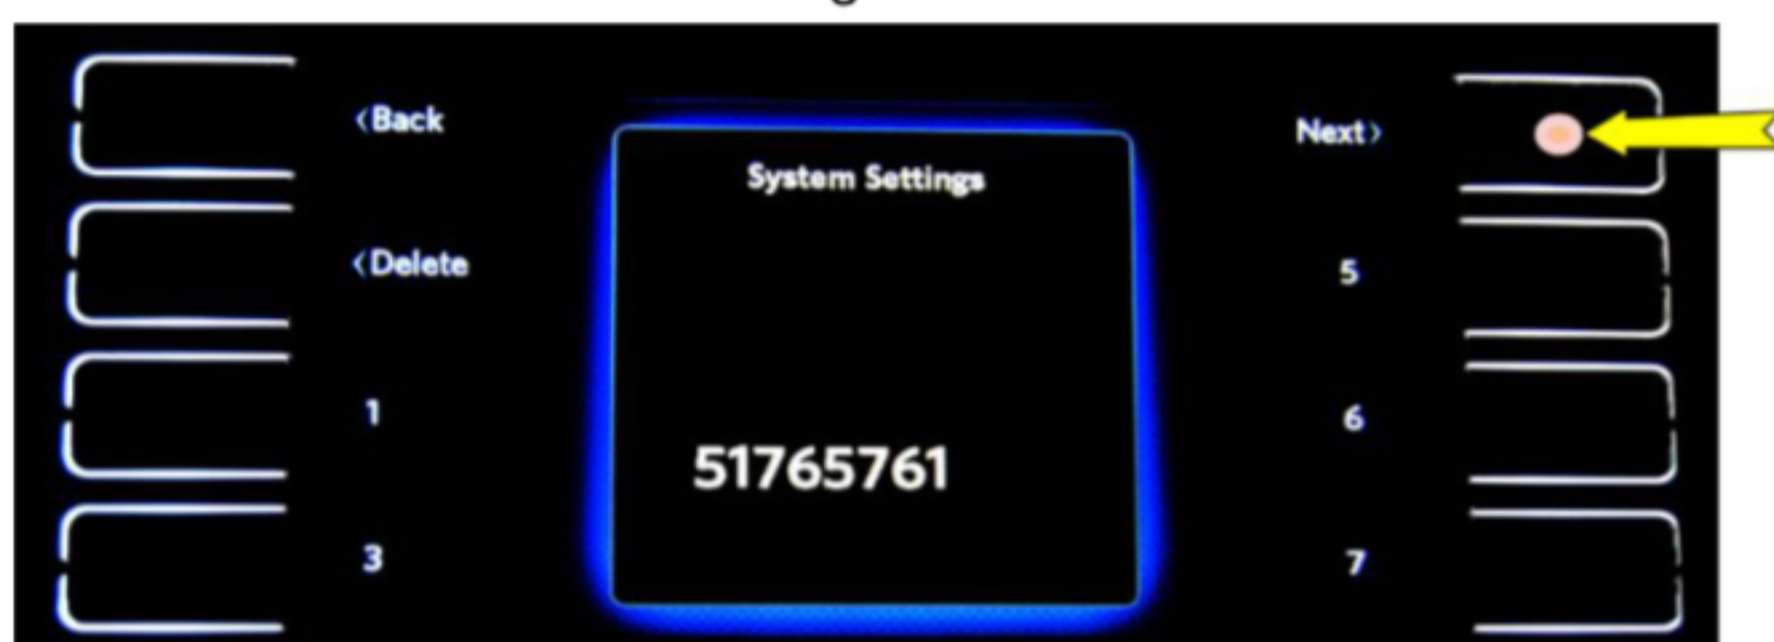

Enter Service Access Mode: Use number softkeys to type in Access Code > select Next

5. Select **Next**.to access the **Service** software.

Hardware Validation (Access Code 51765761)

Hardware Validation service software provides a set of system tests used to verify proper operation of the console and base hardware. System tests can also be used to troubleshoot and resolve problem issues.

Available System Tests:

- **Display GUI/Metric Tests**
 - Backlight brightness changes
 - Numerals cycle properly
- **Key Test**
 - Keys all function
- **Heart Rate Test**
 - Heart rate is acquired and displayed
- **Belt Speed Test**
 - Running belt moves and is controlled from 0.5mph to 12.0mph in 0.1 increments